

AXXIS

Technical Support Bulletin

Loading Instructions for Axxis finishing system

Last update 9-20-10

Abstract: This document describes how to load media into the Axxis finishing machine.

- Turn off all 4 motor switches on front.
- Mark each roller ½ inch from back panel with pencil.
- Slide on printed media so back edge of media aligns with pencil mark.
- Raise lamination roller and open 1st nip roller.
- Thread media through 1st nip and close nip.
- Turn on printed media mandrel.
- If you are using laminate load supply on to lamination mandrel and slide under lamination roller. Turn on laminate supply motor.
- Use F2 button to feed about 2 feet of material through 1st nip.
- Route the material under the dancer bar
- Raise pinch wheels and thread media under pinch wheels
- Use F2 and right arrow joystick button to feed another 2 feet of material.
- Route the material under the 2nd dancer bar
- Thread through 2nd nip.
- Attach liner to empty core on take up and face stock to weed mandrel.

See loading diagram on next page.



i-Tech Axxis Web Path

