


ALLEN DATAGRAPH

Technical Support Bulletin: Changing Pass Count


Last Updated August 4, 2005

Abstract: This TSB show a step by step procedure to change the number of passes that the Quicksand remote panel executes during a job.

To change the pass count from the remote panel click on the setup menu and select material tree. The screen shows an example of the material tree. Select the material for which you need to change the number of passes in the left window. For example Default Barre Gray. Then click on save or cancel at the bottom of the screen.

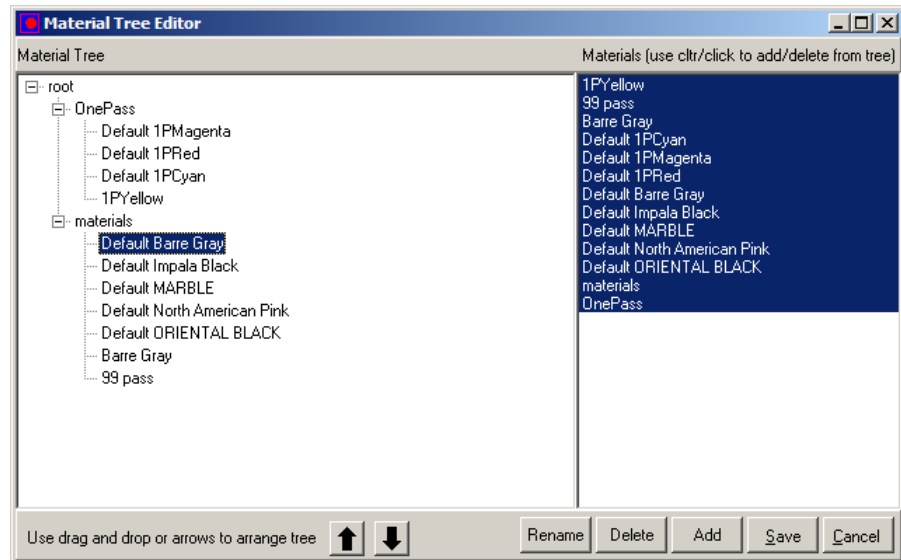

The Pen selection / modification window appears. Pen #2 (red) is normally used for background blowing. Select pen # 2 in the top window by clicking on the pen number.

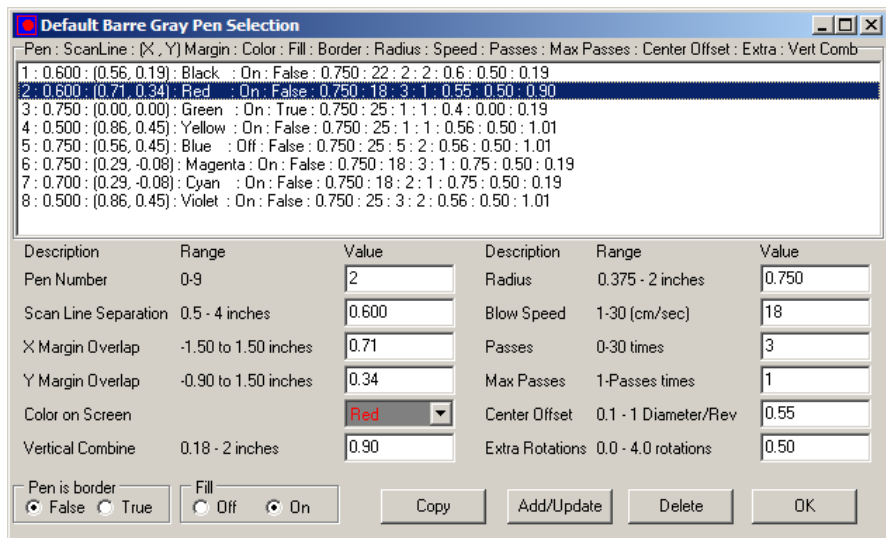

The parameters for that pen now appear in the edit boxes below. The picture at the right shows 3 passes will be performed in areas outlined in red. If you want to change the number of passes to 4 enter the number 4 in the Passes edit box and click on OK.